




AWNING TERMINOLOGY

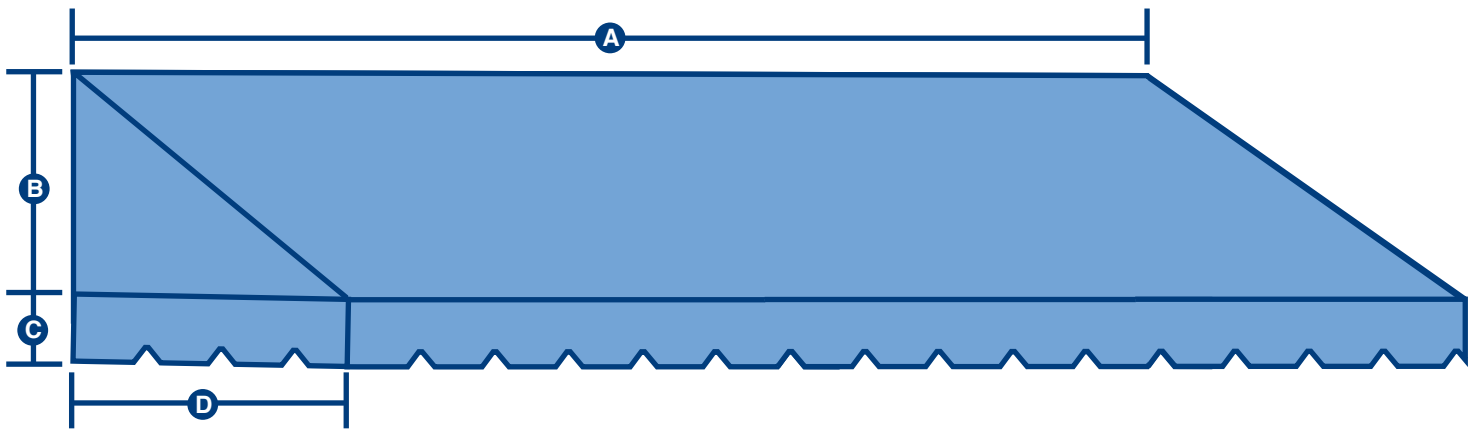

- A** **Width:** The width is the measurement of how wide the awning is.
- B** **Drop:** The drop is the height of the awning. The measurement is taken from top corner to bottom corner.
- C** **Valance:** The valance can either be loose or rigid.
- D** **Projection:** The projection is the horizontal measurement from wall to front of awning.